



## Electrical 1

Ref#	Part
1	Housing LOW GLOSS BLACK 6M6-8552A-01-98 6M6-8552A-01-8P
2	Cover, Case 6M6-8552E-00-00 6M6-8552E-01-00
3	Mark 3 6R7-83623-40-00
4	Gasket, Terminal 6M6-81921-00-00
5	Gasket 6M6-81844-00-00
6	Cap 6M6-8132W-00-00
7	Screw, Tapping 97780-60525-00 97780-60625-00
8	Fuse Holder Assy 6K8-82150-01-00
9	. .Fuse (10A) 6G1-82151-00-00 1E6-82151-00-00
10	C.D.I. Unit Assembly 6M6-85540-01-00
11	Clamp 90464-06M29-00
12	Starter Relay Assy 6G1-81941-10-00
13	Holder, Relay 6M6-81952-01-00
14	Rectifier & Regulator Assy 6M6-81960-A0-00
15	Clamp 90465-08028-00
16	Ignition Coil Assembly 6R8-85570-00-00
17	Tube, Cord 6R8-82351-00-00 6R8-82352-00-00

18 Clamp  
~~90465-11M10-00~~ 90465-10098-00

19 Tube, Cord 2  
6R8-82352-00-00

20 Clamp  
~~90465-11M10-00~~ 90465-10098-00

21 Screw, Pan Head  
~~98580-06030-00~~ 97885-06030-00

22 Washer, Plate  
92990-06600-00

23 Grommet  
90480-06M43-00

24 Screw, Pan Head (92502-06016-00)  
~~98503-06014-00~~ 98507-06014-00

25 Washer, Plate  
92990-06600-00

26 Plug Cap Assembly  
~~6K8-82370-11-00~~ 63M-82370-00-00

27 Clamp  
~~90465-11M10-00~~ 90465-10098-00

28 Clamp, Cord  
6R8-82361-00-00

29 Bolt, Hexagon  
~~97313-08012-00~~ 97013-08012-00

30 Washer, Plate  
92990-08600-00

31 Plug, Spark (Ngk Br8hs)  
~~NGK-BR8HS-00-00~~ BR8-H5000-00-00

32 Extension, Wire Lead  
6R8-82553-01-00

33 Wire, Lead  
~~6M6-82117-01-00~~ 62T-82117-01-00

34 Wire, Lead  
6R8-82117-11-00

35 Thermo Switch Assembly  
6R8-82560-00-00

36 Bolt  
~~97395-06016-00~~ 97095-06016-00

37 Washer, Spring  
92995-06100-00

38 Wire, Lead  
6R8-82117-21-00

39 Clamp  
~~90465-11M10-00~~ 90465-10098-00

40 Bolt, With Washer  
90119-08907-00

41 Clamp  
~~90465-11M10-00~~ 90465-10098-00